

Electro submersible pumps

SD, SDF, SDN, SDX, SDS

ORIGINAL OPERATING INSTRUCTIONS

1. Operating conditions

Standard construction

- For clean or slightly dirty water with maximum sand content: 150 g/m³ (50 g/m³ for SDX).
- Water temperature up to 25 °C (35 °C for 4").
- Max starts per hour at regular intervals: 20 for 4" motors, 15 for 6"-8" motors, 10 for 10" motors.

The electric data marked on the label are referred to the nominal power of the motor.

2. Installation

Along its entire length the well diameter must be wide enough to allow for passage of the pump with clearance all round.

Handle the pump carefully; don't drop it or let it fall.

The safe movement of the equipment is on the user responsibility and any lifting operation must be carried out by a suitably trained and qualified personnel.

When threaded connections are used, delivery pipes must be tightened to avoid any risk of the pump falling into the well owing to unscrews. It is advisable to connect the **metal pipes** to the threaded joints with spot welding.

With **plastic pipes** use proper connections.

The **SD, 6SDX**-series pumps have two holes in the delivery casing for anchoring and for raising the pump.


- 1 control panel
- 2 power cable
- 3 level probes system
- 4 pressure gauge
- 5 non-return valve
- 6 delivery gate valve
- 7 inspection shaft
- 8 safety cable
- 9 delivery piping
- 10 built-in valve
- 11 pump
- 12 filter
- 13 well bottom

A changeable dynamic level.

Z total length of delivery piping;
if >100 m install one or more
non-return valves.

Y depth of immersion, always >1 m.

X distance between motor and well
filter >1 m.

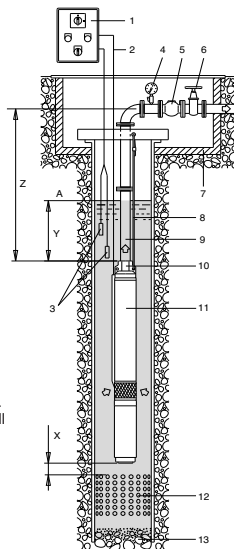

A safety rope or chain of non-perishable material should always be used to secure the pump.

Attach the power supply cables to the delivery pipe with cable clamps placed at intervals of approx 3 m.

Lower the pump into the well, making sure the feed cables are not damaged in any way during the operation.



Never use the electric power cable to suspend the pump.

When the pump is operating, the delivery connection must be submersed at least 1 m below the deepest dynamic level of the well; for this purpose, it is advisable to install an automatic control system which will stop operating of the pump when the level of the water falls below this limit.

Position the pump at a distance from the bottom of the well which will be sufficient to avoid accumulation of sand or mud around the motor and to eliminate the risk of overheating.

The following components must be installed in the **delivery pipe**:

- a pressure gauge;
- a check valve at max. 7 m from the pump outlet and more lift-type **check valves** (5), depending on the type of installation (at least one every 50 m in the straight vertical pipe above the pump), to provide protection against water hammering;
- a **gate valve** to regulate delivery, head and absorbed power.

If the submersible pump is to be installed in the **horizontal position**, the following instructions must be followed:

- install the pump with its axis placed at least 0,5 m above the bottom of the sump, tank or container;
- install a supplementary check valve, as the pump valve does not ensure a perfect seal in the horizontal position;
- the plant must allow for easy evacuation of the air when starting.


2.1. Motor cooling

If the well (or tank) has a diameter which is considerably greater than the pump width, it is necessary to install a **cooling flow shroud** (a flow inducer sleeve), that is an external jacket to ensure a sufficient flow and water velocity ($v \geq 0,08$ m/s for 4", 0,16 m/s for 6" and 0,2 m/s for 8"-10") **to cool the motor**.

3. Assembly of the pumps

The pumps are normally supplied with motor and pump disconnected (except 4SD already assembled). Connect the coupling and pump-motor suction lantern. Clean the surface to be coupled. Put the suction lantern of the pump in correspondance of the motor studs. Couple the grooved joint of the pump to the motor shaft.

Screw in the nuts to the suction lantern, then fix them cross-wise starting from the one opposed to the cable as shown in the figure below. The torque

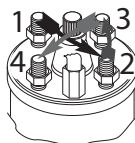

recommended is 10Nm (for 4" motors). Attach the cable to the pump with the cable guard and place the filter on the suction lantern. Follow separate operating instructions (if available) of the motor.

4. Electrical connection



Electrical connection must be carried out only by a qualified electrician in accordance with local regulations.

Follow safety standards.

The unit must be properly earthed (grounded), also with a non-metallic delivery pipe.


Make sure the frequency and mains voltage correspond with the name plate data.

The **control panel** must contain:

- a device for disconnection from the mains (switch) with a contact separation of at least 3 mm in all poles;
- an adequate motor protector for the current indicated on the name-plate;
- a capacitor for the **SDM** single-phase pumps, in accordance with the data indicated on the motors themselves.

For pumps with power rating above 11 kW, it is advisable to provide the control panel with Y/ Δ or impedance starting.

Install electrodes to protect the pump against dry running.

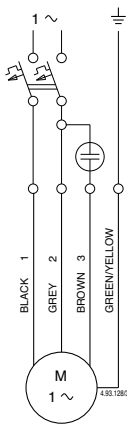

Electrical diagram
single-phase motors

4.1. Connection of cables

Feed cables have to be chosen on the basis of power, distance, voltage drop and temperature.

For connection of cables in the well, use thermo-shrinking insulation sheaths or other systems used for submerged cables.

Before lowering the motor into the well, use appropriate instruments to measure continuity between phases and perform an isolation test between each single phase and the earth conductor.

4.2. Operation with frequency converter

Adjust the frequency converter so that the limiting values of min. 30 Hz and max. 60 Hz will not be exceeded.

The maximum running up time from 0 to 30 Hz and running down time from 30 to 0 Hz for frequency-converter operation is 1 second.

5. Starting

ATTENTION: never run the pump dry, not even for a short trial run.

Start the pump with the gate valve regulated to minimum aperture and wait until the delivery pipe is completely free of air.

With a three-phase motor make sure the direction of rotation is correct.

For this purpose, with the gate valve at half-open aperture position, check the pressure (with the pressure gauge) or flow rate (sight check) after starting. Switch off power, reverse the connections of two phases on the control panel, re-start and check the pressure or flow rate capacity again.

The correct direction of rotation will provide a considerably greater and easily distinguishable pressure and delivery capacity.

Make sure the sand residue present in the water disappears or is minimal.

Never start or run the pump when the gate valve has been opened too widely.

Make sure the pump operates within its rated limits of performance and that the rated absorbed current is not exceeded.

Otherwise, regulate the delivery gate valve or the setting of any pressure switches.

ATTENTION: avoid long periods of operation with closed discharge.

5.1. Generator supply

The switching sequence is of utmost importance. If you do not apply this correctly, both motor and generator may be damaged.

Therefore:

- Always switch the generator on and off without load!

This means:

- Starting: always switch the generator ON first - and the motor afterwards!
- Stopping: always switch the motor OFF first - and the generator afterwards!

6. Maintenance

Under normal operating conditions with clean water the pump will not require maintenance. Absorbed current and head supplied by the pump must be checked at regular intervals.

This procedure should be carried out frequently when water contains considerable quantities of sand. In the case of emergency systems, it is advisable to operate the pumps once a month in order to avoid the risk of blocking and to maintain and verify perfect efficiency.



Disconnect electrical power before any servicing operation.

Changes reserved.

4SDF 16,22,36,46,54

MODELLI CON INTERSTADIO
MODELS WITH INTERMEDIATE BUSH BRACKET
MODELOS CON SOPORTE INTERMEDIO

4SDF 16-55

4SDF 22-57

4SDF 36-49

4SDF 36-60


4SDF 46-42

4SDF 46-55


4SDF 54-40

4SDF 54-48


4SDF 54-55

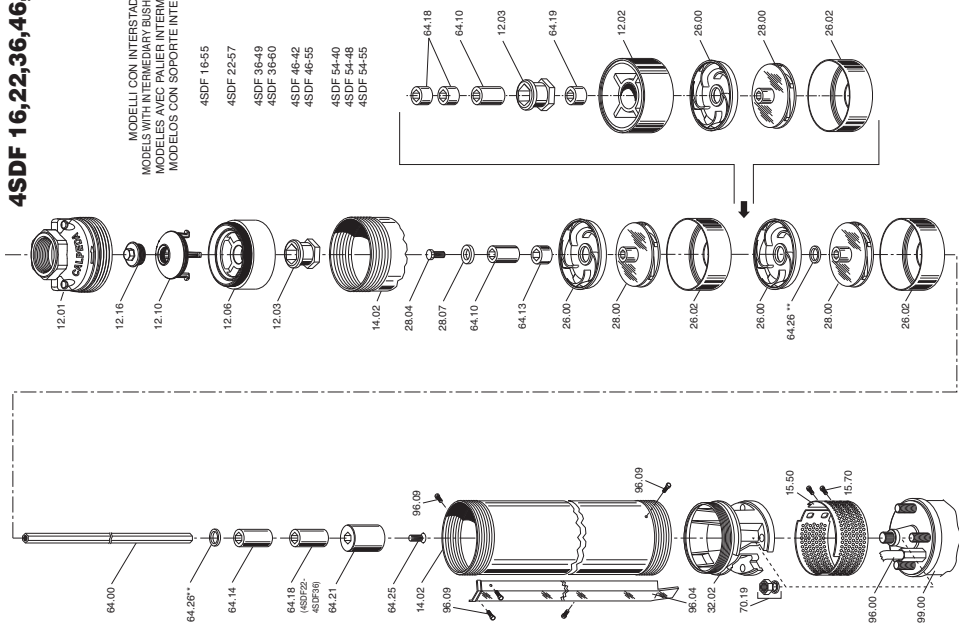


6SD 18,19,20

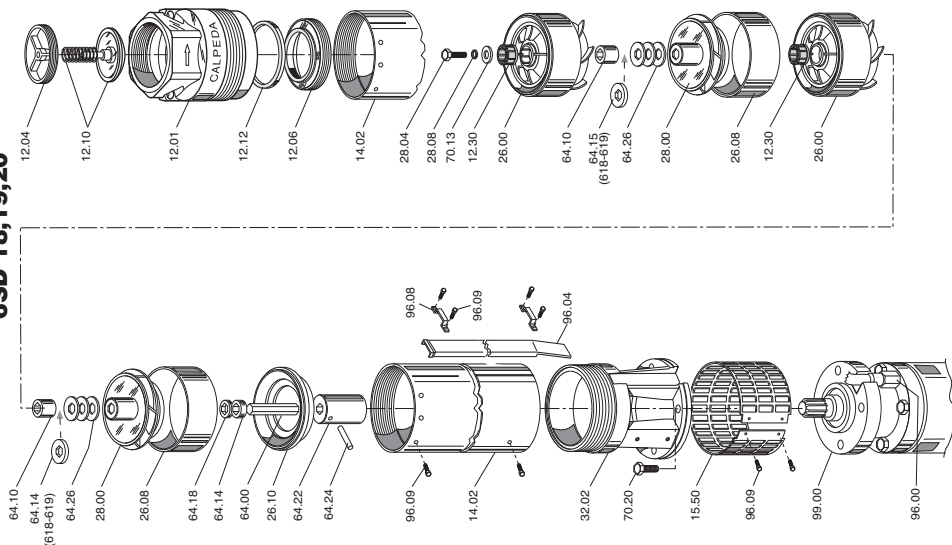


6SDN 12,16,21

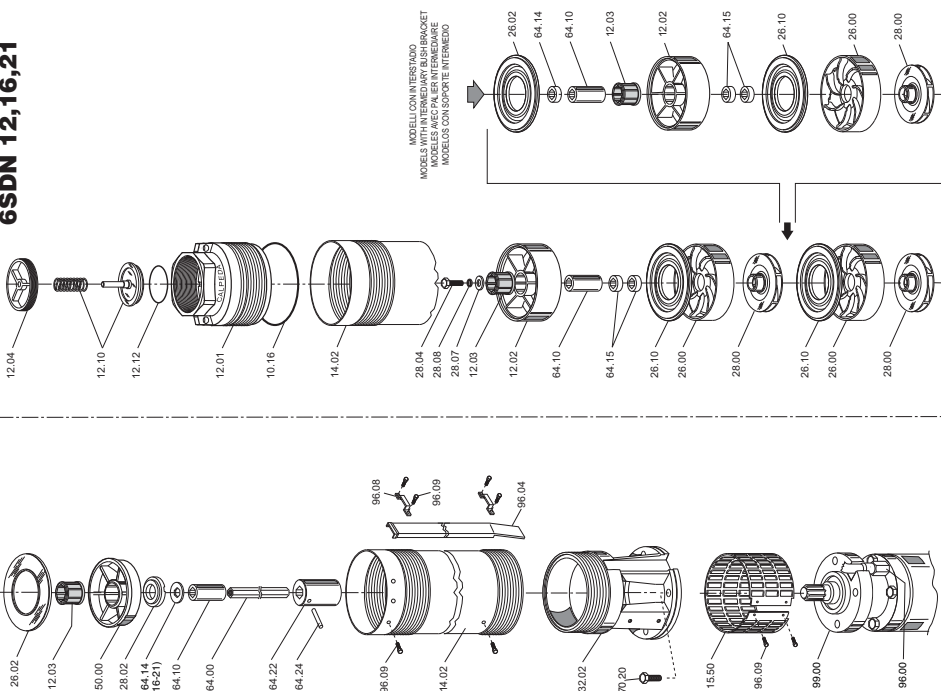


6SDX 13,18,27

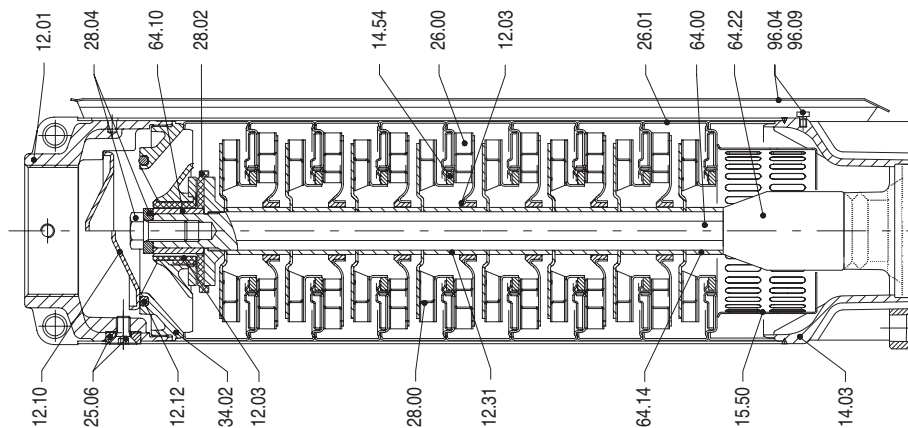


6SDX 45,60

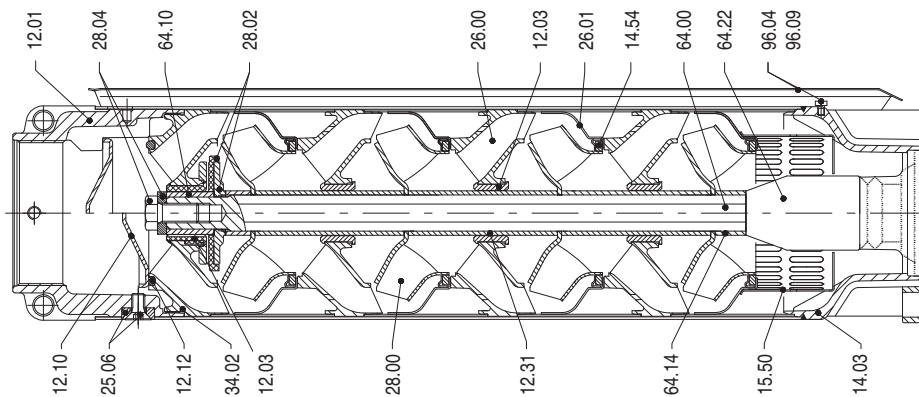


8SDX 78,97

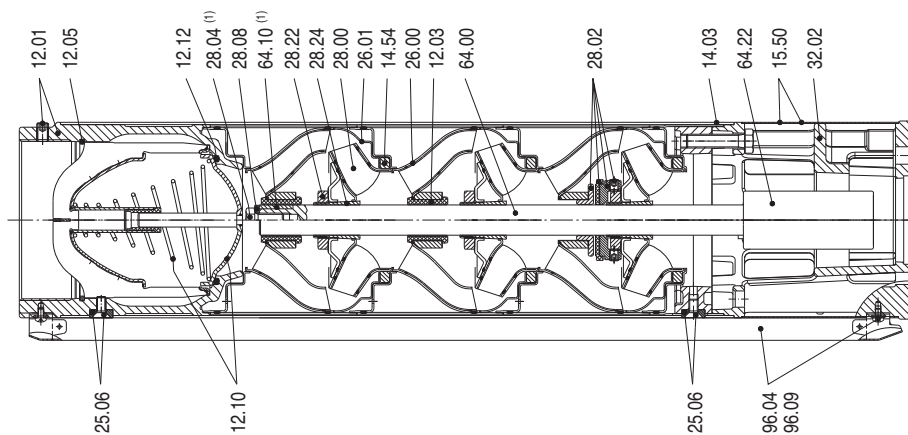

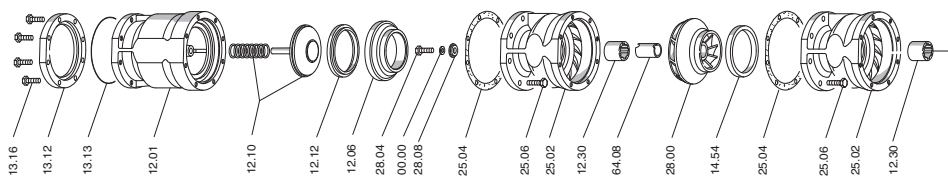


This diagram shows the exploded view of a motor assembly. The parts are numbered as follows:

- 28.24: Small pin or screw at the top left.
- 28.00: Large circular component, possibly a fan or cover.
- 14.54: Ring or flange below the fan.
- 12.30: Another ring or flange.
- 25.04: Small circular component.
- 15.20: A separate cylindrical component with a flange.
- 96.09: A bracket or support arm.
- 96.08: A small pin or screw.
- 96.04: A long, thin component, possibly a shaft or armature.
- 25.06: A small pin or screw.
- 32.02: A large circular component, possibly a stator or housing.
- 28.02: A small pin or screw.
- 64.20: A long, thin component, possibly a shaft or armature.
- 64.00: A small pin or screw.
- 64.22: A small pin or screw.
- 64.25: A small pin or screw.
- 90.00: A small pin or screw.
- 70.20: A small pin or screw.
- 99.00: A large cylindrical component, possibly a motor housing or base.

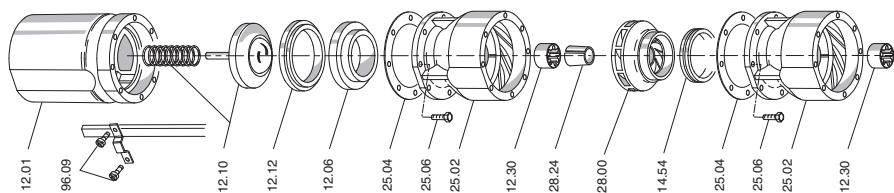

10SDS

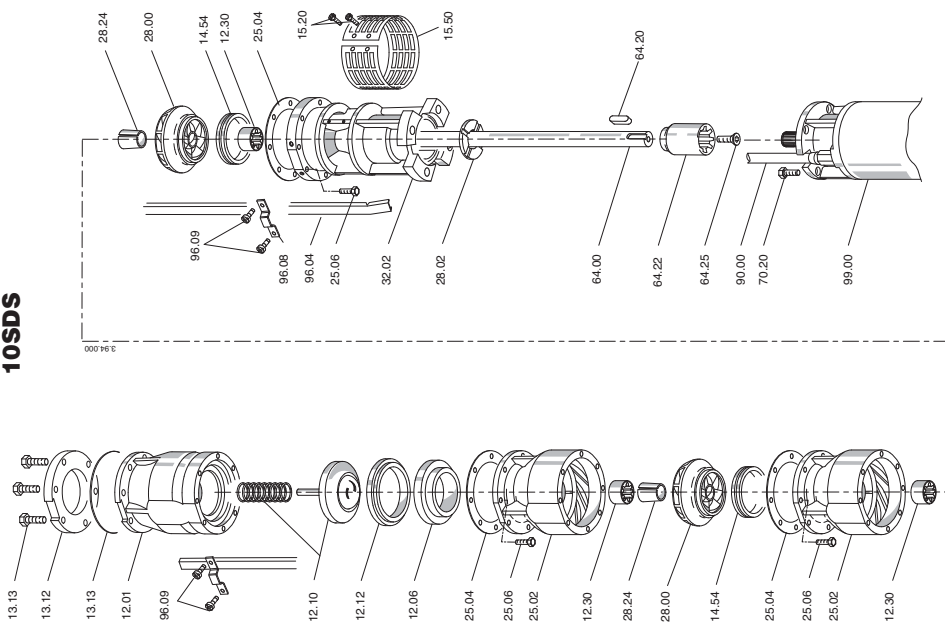

Italiano**Nr. Denominazione**

10.16 Guarnizione
12.01 Corpo di mandata
12.02 Supporto boccola
12.03 Cuscinetto a boccola (parte fissa)
12.04 Guida valvola
12.05 Anello di sicurezza
12.06 Sede valvola
12.10 Valvola completa
12.12 Guarnizione valvola
12.16 Tappo
12.30 Cuscinetto a boccola stadio
12.31 Bussola del cuscinetto (rotante)
13.12 Controflangia premente
13.13 Guarnizione flangia premente
13.16 Vite
14.02 Camicia esterna
14.54 Anello di tenuta
15.20 Vite
15.50 Filtro
25.02 Corpo stadio
25.04 Guarnizione piana
25.06 Vite
26.00 Diffusore (pompa)
26.02 Parete del diffusore
26.08 Camicia del diffusore
26.10 Anello convogliatore
28.00 Girante
28.02 Anello di contropinta
28.04 Dado bloccaggio girante (o vite)
28.05 Anello di sicurezza
28.07 Rondella
28.08 Rosetta
28.20 Linguetta girante
28.24 Bussola conica
32.02 Lanterna aspirante
34.02 Coperchio superiore
46.50 Parasabbia
64.00 Albero pompa
64.08 Camicia di protezione
64.10 Bussola cuscinetto
64.13 Bussola distanziatrice superiore
64.14 Bussola distanziatrice inferiore
64.15 Bussola distanziatrice
64.18 Bussola distanziatrice
64.19 Bussola distanziatrice
64.20 Linguetta per estremità d'albero
64.21 Giunto
64.22 Giunto completo
64.23 Rondella
64.24 Spina elastica
64.25 Vite
64.26 Spessore di aggiustaggio
70.13 Rondella
70.19 Dado
70.20 Vite
96.00 Cavo
96.04 Copricavo
96.08 Staffa
96.09 Vite
99.00 Motore completo

English**Nr. Part designation**

10.16 Gasket
12.01 Delivery casing
12.02 Bush casing
12.03 Bearing sleeve (stationary part)
12.04 Valve guide
12.05 Circlip
12.06 Valve seat
12.10 Valve set
12.12 Valve joint
12.16 Plug
12.30 Stage bearing sleeve
12.31 Bearing sleeve (rotating part)
13.12 Counterflange, delivery side
13.13 Flange gasket, delivery side
13.16 Screw
14.02 External jacket
14.54 Wear ring
15.20 Screw
15.50 Strainer
25.02 Stage casing
25.04 Gasket
25.06 Screw
26.00 Diffuser (pump)
26.02 Diffuser plate
26.08 Diffuser sleeve
26.10 Conveyor ring
28.00 Impeller
28.02 Counter thrust bearing ring
28.04 Impeller nut (or screw)
28.05 Circlip
28.07 Washer
28.08 Washer
28.20 Impeller key
28.24 Locking sleeve
32.02 Suction lantern
34.02 Upper cover
46.50 Sand guard
64.00 Pump shaft
64.08 Shaft sleeve
64.10 Bearing sleeve
64.13 Upper spacer sleeve
64.14 Lower spacer sleeve
64.15 Intermediate spacer sleeve
64.18 Spacer sleeve
64.19 Spacer sleeve
64.20 Key for shaft end
64.21 Coupling
64.22 Coupling, set
64.23 Washer
64.24 Shear pin
64.25 Screw
64.26 Adapter thickness
70.13 Washer
70.19 Nut
70.20 Screw
96.00 Cable
96.04 Cable guard
96.08 Clamp
96.09 Screw
99.00 Complete motor

Deutsch**Nr. Teile-Benennung**

10.16 Flachdichtung
12.01 Druckgehäuse
12.02 Buchsegehäuse
12.03 Lagerbuchse
12.04 Tellerführung
12.05 Sicherungsring
12.06 Ventil Sitz
12.10 Ventil, komplett
12.12 Ventilsitzdichtung
12.16 Verschlußschraube
12.30 Stufenbüchse
12.31 Lagerhülse
13.12 Gegenflansch, druckseitig
13.13 Flachdichtung, druckseitig
13.16 Schraube
14.02 Pumpenmantel
14.54 Spaltring, saugseitig
15.20 Schraube
15.50 Saugsieb
25.02 Stufengehäuse
25.04 Flachdichtung
25.06 Schraube
26.00 Leitrads
26.02 Leitrads wand
26.08 Stufenmantel
26.10 Förderring
28.00 Laufrad
28.02 Gegenaxiallagering
28.04 Laufradmutter (oder Schraube)
28.05 Sicherungsring
28.07 Scheibe
28.08 Scheibe
28.20 Paßfeder für Laufrad
28.24 Spannhülse
32.02 Sauggehäuse
34.02 Oberer Deckel
46.50 Sandschutzring
64.00 Pumpenwelle
64.08 Wellenschutzhülse
64.10 Lagerhülse
64.13 Abstandshülse, oben
64.14 Abstandshülse, unten
64.15 Zwischenabstandshülse
64.18 Abstandshülse
64.19 Abstandshülse
64.20 Paßfeder für Wellenende
64.21 Kupplung
64.22 Kupplung, komplett
64.23 Scheibe
64.24 Paßstift
64.25 Schraube
64.26 Zwischenlage
70.13 Scheibe
70.19 Mutter
70.20 Schraube
96.00 Kabel
96.04 Kabelschutzleiste
96.08 Schelle
96.09 Schraube
99.00 Motor, komplett

I DICHIARAZIONE DI CONFORMITÀ

Noi CALPEDA S.p.A. dichiariamo sotto la nostra esclusiva responsabilità che le Pompe SD, SDM, SDN, SDX, SDS, B-SDS, tipo e numero di serie riportati in targa, sono conformi a quanto prescritto dalle Direttive 2004/108/CE, 2006/42/CE, 2006/95/CE e dalle relative norme armonizzate.

GB DECLARATION OF CONFORMITY

We CALPEDA S.p.A. declare that our Pumps SD, SDM, SDN, SDX, SDS, B-SDS, with pump type and serial number as shown on the name plate, are constructed in accordance with Directives 2004/108/EC, 2006/42/EC, 2006/95/EC and assume full responsibility for conformity with the standards laid down therein.

D KONFORMITÄTSERKLÄRUNG

Wir, das Unternehmen CALPEDA S.p.A., erklären hiermit verbindlich, daß die Pumpen SD, SDM, SDN, SDX, SDS, B-SDS, Typbezeichnung und Fabrik-Nr. nach Leistungsschild den EG-Vorschriften 2004/108/EG, 2006/42/EG, 2006/95/EG entsprechen.

F DECLARATION DE CONFORMITE

Nous, CALPEDA S.p.A., déclarons que les Pompes SD, SDM, SDN, SDX, SDS, B-SDS, modèle et numero de série marqués sur la plaque signalétique sont conformes aux Directives 2004/108/CE, 2006/42/CE, 2006/95/CE.

E DECLARACION DE CONFORMIDAD

En CALPEDA S.p.A. declaramos bajo nuestra exclusiva responsabilidad que las Bombas SD, SDM, SDN, SDX, SDS, B-SDS, modelo y numero de serie marcados en la placa de características son conformes a las disposiciones de las Directivas 2004/108/CE, 2006/42/CE, 2006/95/CE.

DK OVERENSSTEMMELSESEKKLÆRING

Vi CALPEDA S.p.A. erklærer hermed at vore pumper SD, SDM, SDN, SDX, SDS, B-SDS, pumpe type og serie nummer vist på typeskiltet er fremstillet i overensstemmelse med bestemmelserne i Direktiv 2004/108/EC, 2006/42/EC, 2006/95/EC og er i overensstemmelse med de heri indeholdte standarder.

P DECLARAÇÃO DE CONFORMIDADE

Nós, CALPEDA S.p.A., declaramos que as nossas Bombas SD, SDM, SDN, SDX, SDS, B-SDS, modelo e número de série indicado na placa identificadora são construídas de acordo com as Directivas 2004/108/CE, 2006/42/CE, 2006/95/CE e somos inteiramente responsáveis pela conformidade das respectivas normas.

NL CONFORMITEITSVERKLARING

Wij CALPEDA S.p.A. verklaren hiermede dat onze pompen SD, SDM, SDN, SDX, SDS, B-SDS, pomptype en serienummer zoals vermeld op de typeplaat aan de EG-voorschriften 2004/108/EU, 2006/42/EU, 2006/95/EU voldoen.

SF VAKUUTUS

Me CALPEDA S.p.A. vakuutamme että pumppumme SD, SDM, SDN, SDX, SDS, B-SDS, malli ja valmistusnumero tyypikkivstä, ovat valmistettu 2004/108/EU, 2006/42/EU, 2006/95/EU direktiivien mukaisesti ja CALPEDA ottaa täyden vastuun siitä, että tuotteet vastaavat näitä standardeja.

S EU NORM CERTIFIKAT

CALPEDA S.p.A. intygat att pumpar SD, SDM, SDN, SDX, SDS, B-SDS, pumptyp och serienummer, visade på namnplåten är konstruerade enligt direktiv 2004/108/EC, 2006/42/EC, 2006/95/EC. Calpeda åtar sig fullt ansvar för överensstämmelse med standard som fastställts i dessa avtal.

GR ΔΗΛΩΣΗ ΣΥΜΦΩΝΙΑΣ

Εμείς ως CALPEDA S.p.A. δηλώνουμε ότι οι αντλίες μας αυτές SD, SDM, SDN, SDX, SDS, B-SDS, με τύπο και αριθμό σειράς κατασκευής όπου αναγράφεται στην πινακίδα της αντλίας, κατασκευάζονται σύμφωνα με τις οδηγίες 2004/108/EOK, 2006/42/EOK, 2006/95/EOK, και αναλαμβάνουμε πλήρη υπευθυνότητα για συμφωνία (συμμόρφωση), με τα στάνταρς των προδιαγραφών αυτών.

TR UYGUNLUK BEYANI

Bizler CALPEDA S.p.A. firması olarak SD, SDM, SDN, SDX, SDS, B-SDS, Pompalarımızın, 2004/108/EC, 2006/42/EC, 2006/95/EC, direktiflerine uygun olarak imal edildiklerini beyan eder ve bu standartlara uygunluğuna dair tüm sorumluluğu üstleniriz.

RU Декларация соответствия

Компания "Calpeda S.p.A." заявляет с полной ответственностью, что насосы серий SD, SDM, SDN, SDX, SDS, B-SDS, тип и серийный номер которых указывается на заводской табличке соответствуют требованиям нормативов 2004/108/CE, 2006/42/CE, 2006/95/CE.

中文 声明

我们科沛达泵业公司声明我们制造的 SD, SDM, SDF, SDFM, SDN, SDX, SDS, B-SDS, 系列水泵 (在铭牌上标示水泵的型号和序列号) 均符合以下标准的相应目录要求: 2004/108/CE, 2006/42/CE, 2006/95/CE. 本公司遵循其中的标准并承担相应的责任

L'Amministratore Unico